


UNIC URW-547/506/706 – LIGNE DE SECOURS

Operating the Carrier


1: Is the crane stored properly?

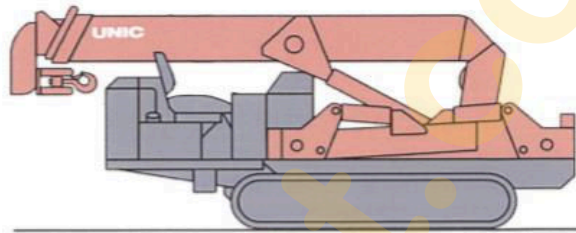


2: Start the engine.





3: Pull the interlock device down to the drive position.

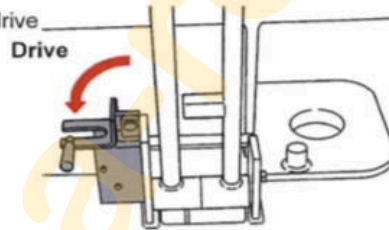

4: Use the drive lever to go forward, reverse or neutral.

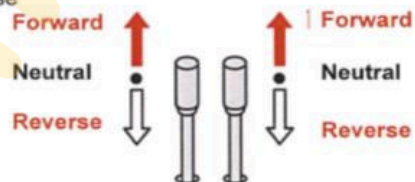

5: Press/release the gas pedal to speed up/slow down.

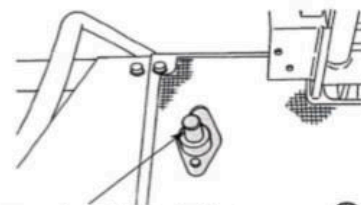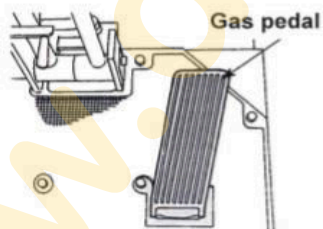

Drive speed switchover button
To go faster, press the switchover button for the drive gear.



Outrigger selector switch



Voice switch

How to operate outriggers by manual lever.

However, this operation is possible under the following condition.

- 1) Starter switch on.



- 2) Shift the lever to "Crane" position.



- 3) Operation mode switch is changed to the outrigger side.
Outrigger mode indicator lamp lights on.



- 4) There are four (4) outrigger control switches and each switch is numbered. Select an outrigger control switch to throw it to desired function and operate the outrigger lever accordingly.



Comment utiliser le système de radiocommande?



Étape 1: LIBÉRER L'ARRÊT D'URGENCE

Étape 2: TOURNER LA CLÉ DE CONTACT VERS « ON »

Étape 3: PASSER LE MODE DE FONCTIONNEMENT À "REMOTE"

Étape 4: APPUYEZ SUR LE BOUTON ROUGE UNE FOIS (claxon/start)

Étape 5: L'INDICATEUR "VITESSE" DEVIENT ROUGE

Étape 6: APPUYEZ SUR LE BOUTON ROUGE UNE FOIS (claxon/start)

Étape 7: LA GRUE CLAXONNE, INDIQUANT QUE LE SYSTÈME EST PRÊT À FONCTIONNER

Si d'autres problèmes se posent, appelez le +33 (0)3 28 200 580 (en France) ou le +32 (0) 56 222 111 (en Belgique).